



- A) remove the temple support shaft
- B) open the sensor holder and remove the plastic lower cover (IF YOU CAN NOT OPEN THE DOOR GO TO POINT D)
- C) loosen the 2 screws and approach the magnet to the door sensor then fix the 2 screws
- D) remove the plastic sensors cover
- E) if present remove the relevant screw of the fixing metal rod (In the case of dual sensor must be removed if present). **This screw blocks the rotation of the door sensor and puts only for PAN ONLY.**
- F) check the right position of the movement group : position the flag in the sensor (1)
- G) check well that the movement group keeps the right position (open and closed) .
- H) Mount the group in the same position and check that the cables (2) and the movement group are in the right position (Pano and Ceph) , mount the plastic lower cover and the temple support shaft.

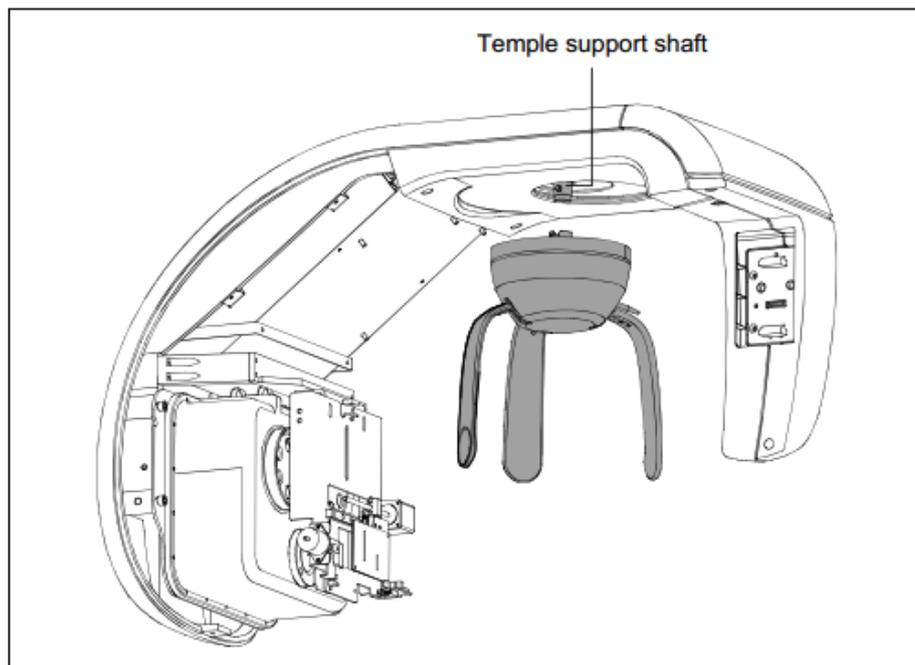


A

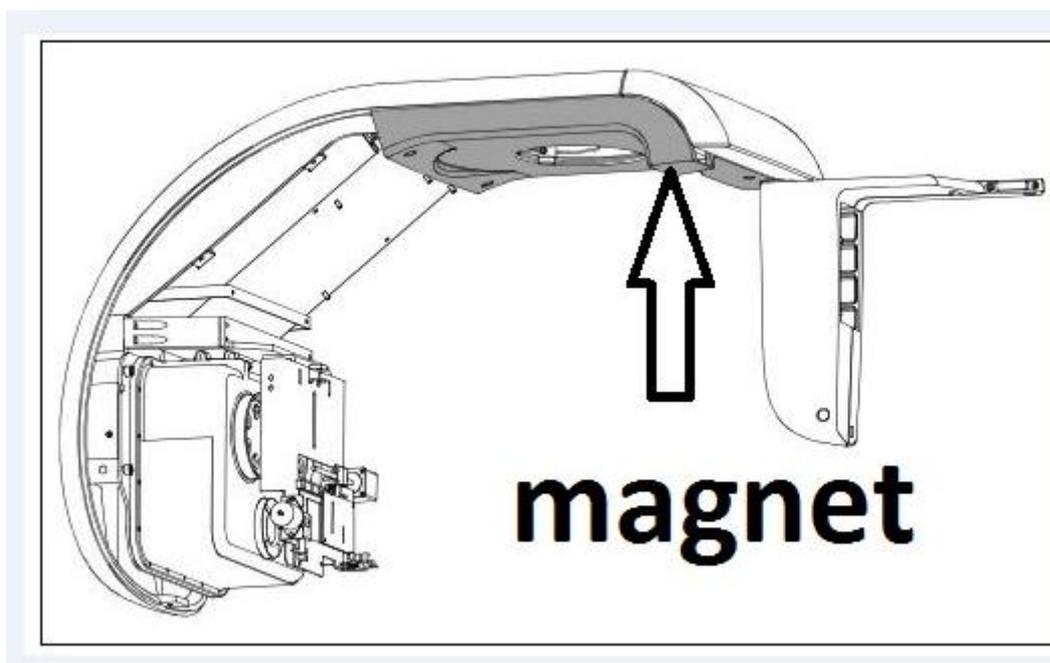


B - C



D

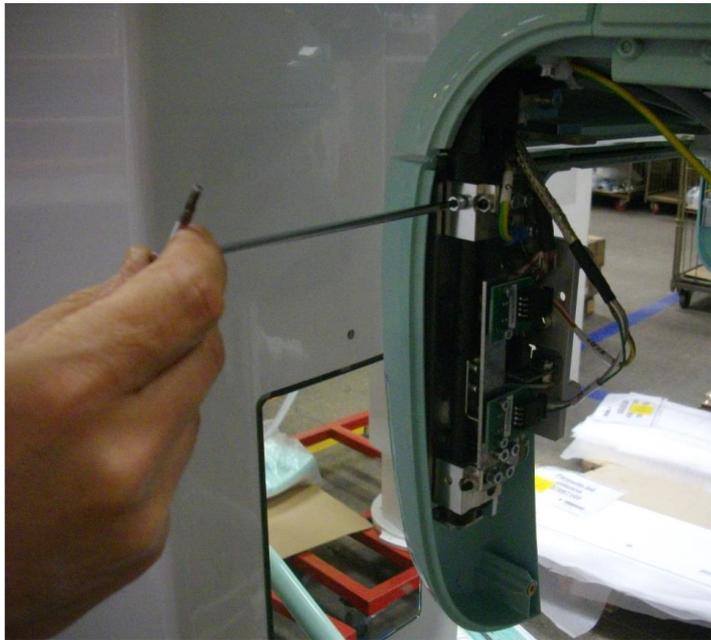


E

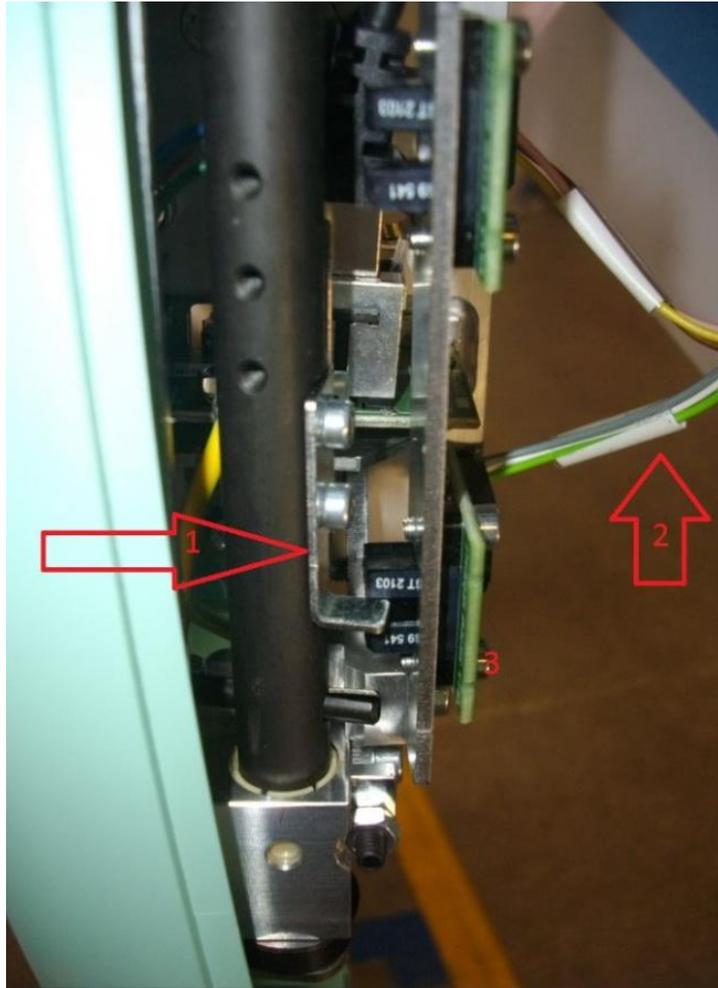


F



G - H

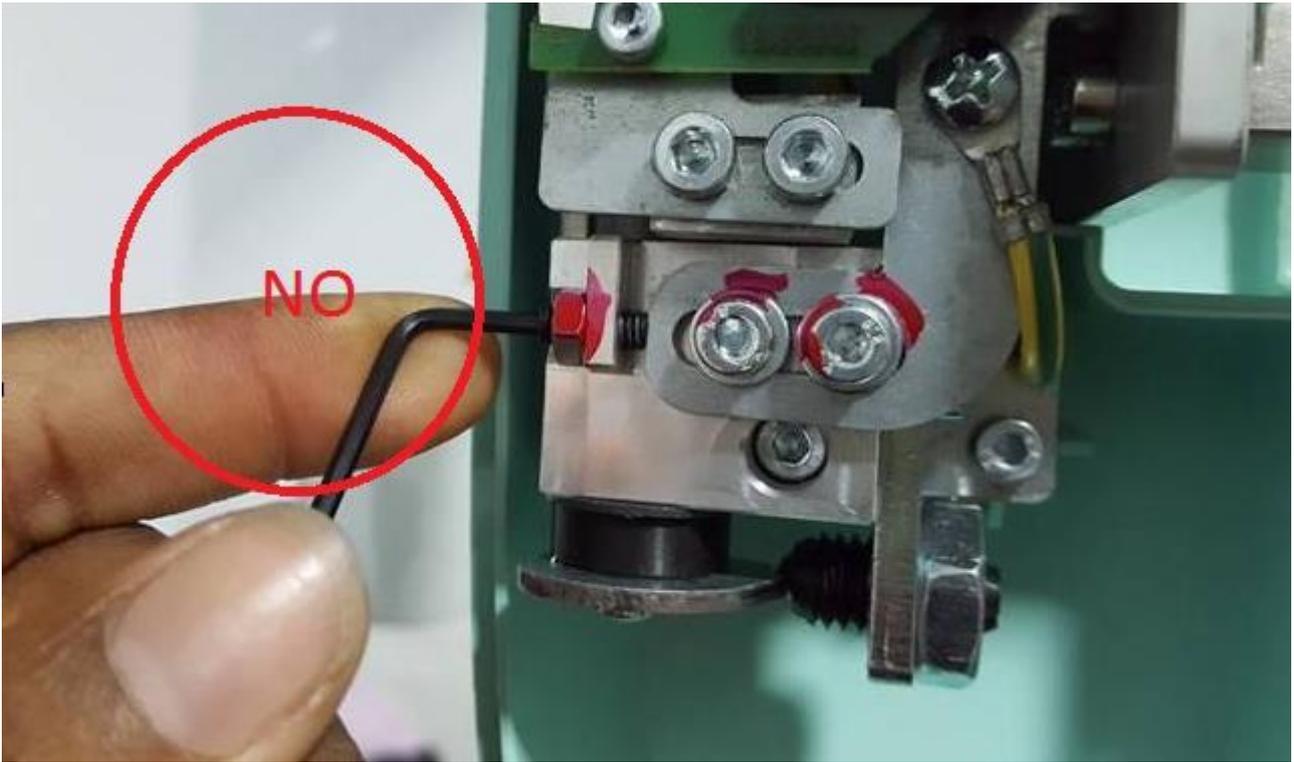

DON'T TOUCH

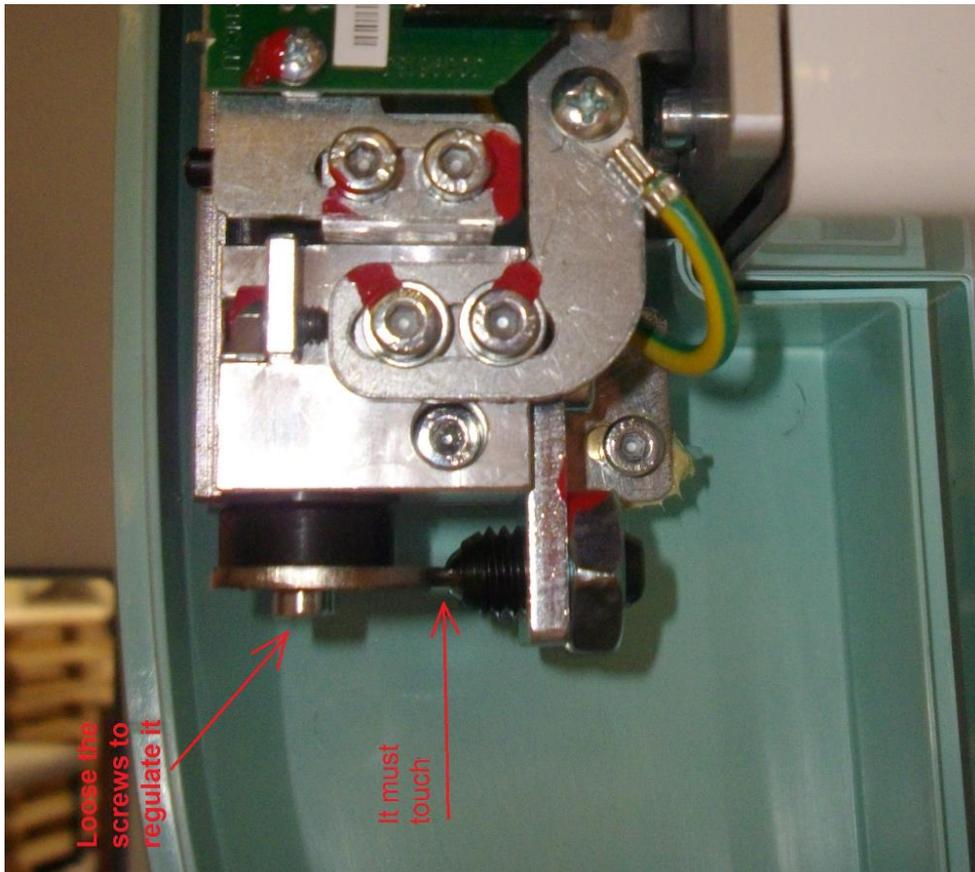

DON'T TOUCH